

Accessories

For Fitting of Products with Small Terminal Casing LC and LC/L



Set of Seals
O-rings / sealing inserts





Terminal Casing LC
Material: PP
Terminal Casing LC/L
Material: PVDF

Mounting Wrench SL
for opening and closing the terminal cap of small terminal casings LC and the lead screw fixing.
Material: Grivory GVN



Mounting Sleeve ML
enables space-saving fitting in container lid or tank cross-beams. Drill-hole diameter: Ø 63 mm.
Material: EPDM

Support HL
is screwed firmly onto the tank rim and the terminal casing LC is a simple push-fit.
Material: PP or PVDF (HL/L)

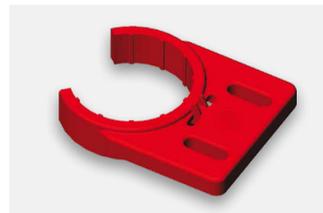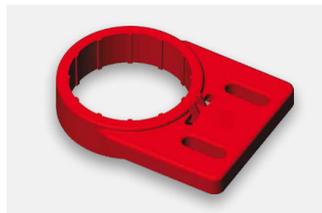

Support HWL
for fixing long probes.
Material: PP or PVDF (HWL/L)

Recommendations for Usage

As with all products with terminal casing care has to be taken, when installing them on the container rim, that the terminal casing does not submerge in the process liquid or is exposed to highly concentrated steam. Direct exposure of the underside of the casing to steam must be prevented by suitable installation measures (i.e. holding sleeve HM or a flange)

Service

Every process liquid puts specific demands on the materials of the products used. Please see our "Resistance List" showing the chemical resistance of the materials often used in the most common solutions. For efficient planning of heating your container or system we offer you our computer-aided calculation of the energy necessary for heating up the treatment liquids to the temperature you require and maintaining it. Take advantage of our service.

